

CLASSIC WOOD BASSINET INSTRUCTION SHEET

Bassinet Model Numbers: 10632, 10639, 10832, 10839, 10835, BT021

Dorel Juvenile Group, Inc. is an authorized licensee of Eddie Bauer Licensing Services LLC.

Eddie Bauer® and the Eddie Bauer logos are the registered trademarks of Eddie Bauer Licensing Services LLC.


©2012 Cosco Management, Inc. All Rights Reserved. Todos derechos reservados.

www.djgusa.com (800) 544-1108 www.ebbaby.com/Distributed by (distribuido por) Dorel Juvenile Group, Inc.,

2525 State Street, Columbus, IN 47201-7494Dorel Distribution Canada, 873 Hodge, St-Laurent, QC H4N 2B1

Part No. 4358-5967 9-21-2012

Your bassinet locking feature may not be operating properly if the Lock Rod Spring is missing. Check to ensure the spring is installed with the following steps.

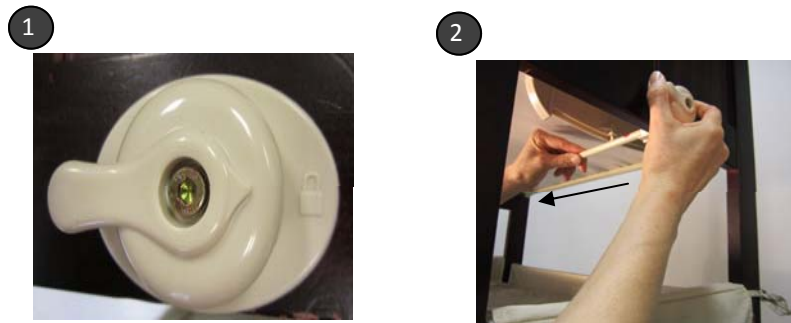

- 1 Lock bassinet
- 2 Hold Knob in locked position. Pull Lock Rod away from Knob and release.


If the Rod springs back, the Spring is installed, and there is nothing else you need to do.

If the Rod did not spring back, DO NOT use the bassinet. Follow the instructions to install the Spring.

Instructions to Install the Spring

Special Note: Although original instructions state, "DO NOT disassemble," for this one-time spring installation, your bassinet will continue to work properly.

1. Place bassinet on flat surface with Knob facing up.
Underneath bassinet, locate Lock Rod and Rocking Guide.

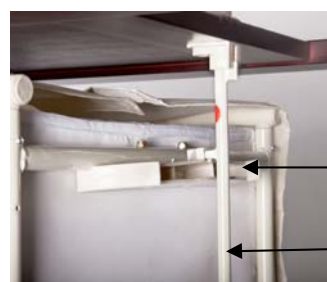

Rocking Guide

Lock Rod



Back Panel
with Keyhole

2.



With the hex key (Allen wrench), remove four bolts.

3.



Raise Front Panel until it separates from Side Boards.
Remove Rod and set aside.

4.




Insert Spring into Keyhole opening on Back Panel.


Back Panel with Keyhole

5. Re-Install Lock Rod


- A Hold Rod with Red Dot side facing up. Insert opposite end of Rod into Keyhole on Back Panel.
- B Insert Tab at Red Dot end of Rod into Rocking Guide.
- C Insert Rod into back of Knob. Place Front Panel over Rod end.

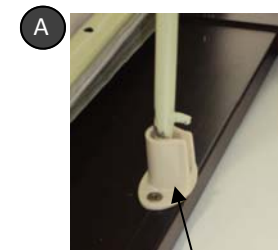

Key Hole in
Back Panel

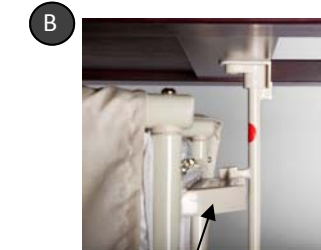

Rocking Guide

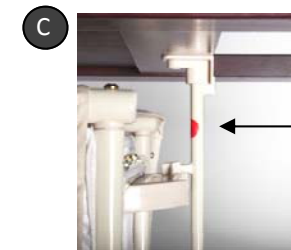

Back of Knob
on Front Panel

Red Dot

6.




Line up bolts with threaded holes in Side Boards. Tighten bolts with hex key (Allen wrench) on Front panel (**do not over tighten**).

Check the function of the Rod as on first page. If it springs back, your bassinet is ready to use. If not, DO NOT use the bassinet.

Please call us at 1-877-416-0165.

INSTRUCCIONES DEL MOISÉS

CLASSIC WOOD BASSINET

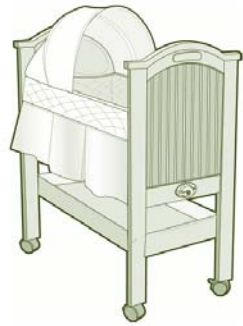

Números de modelos de moisés: 10632, 10639, 10832, 10839, 10835, BT021

Dorel Juvenile Group, Inc. is an authorized licensee of Eddie Bauer Licensing Services LLC.

Eddie Bauer® and the Eddie Bauer logos are the registered trademarks of Eddie Bauer Licensing Services LLC.

©2012 Cosco Management, Inc. All Rights Reserved. Todos derechos reservados.

www.djgusa.com (800) 544-1108 www.ebbaby.com/Distributed by (distribuido por) Dorel Juvenile Group, Inc.,

2525 State Street, Columbus, IN 47201-7494Dorel Distribution Canada, 873 Hodge, St-Laurent, QC H4N 2B1


Es posible que no funcione correctamente el mecanismo de cierre del moisés si faltara el muelle de la varilla de cierre. Siga los siguientes pasos para asegurarse de que esté instalado el muelle.

1



1 Cierre el moisés

2

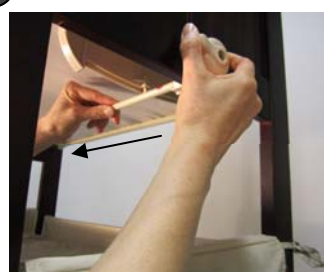

2 Sostenga la perilla en la posición de cierre. Jale la varilla de cierre para alejarla de la perilla y entonces suéltela.


Si la varilla regresa a su sitio, el muelle está instalado y no es necesario que haga nada más.

Si la varilla no regresa a su sitio, **NO USE** el moisés. Siga las instrucciones para instalar el muelle.

Instrucciones para instalar el muelle

Nota especial: Aunque las instrucciones originales dicen "NO LO DESARME", el moisés seguirá funcionando correctamente en el caso de esta instalación del muelle por una única vez.

1. Ponga el Moisés sobre una superficie plana con la perilla hacia arriba. Busque bajo el moisés la varilla de cierre y la guía de mecido.

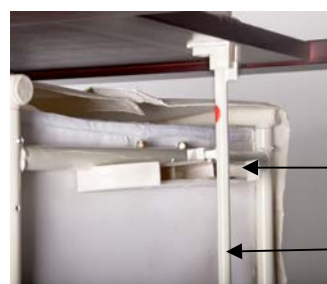

Guía de mecido

Varilla de cierre



Panel trasero, con abertura

2.




Quite los cuatro tornillos con la llave hexagonal (llave Allen).

3.



Levante el panel delantero hasta que se separe de los costados. Quite la varilla y póngala a un lado.

4.

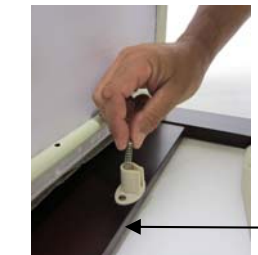

Introduzca el muelle en la abertura del panel trasero.

Panel trasero, con abertura

5. Reinstale la varilla de cierre

A

Sostenga la varilla con el lado del punto rojo hacia arriba. Introduzca en la abertura del panel trasero el extremo opuesto de la varilla.

B

Introduzca en la guía de mecido la lengüeta del extremo del punto rojo de la varilla.

C


Introduzca la varilla en la parte de atrás de la perilla. Ponga el panel delantero sobre la punta de la varilla.

A




Abertura del panel trasero

B

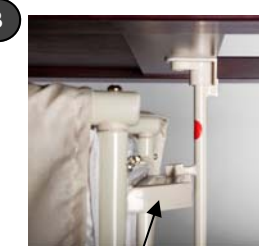

Guía de mecido

C

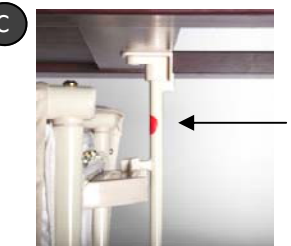

Punto Rojo

Parte trasera de la perilla en el panel delantero

6.



Introduzca los tornillos en los orificios con rosca de los costados. Apriete los tornillos con la llave hexagonal (llave Allen) en el panel delantero (**no los apriete en exceso**).

Compruebe el funcionamiento de la varilla, como se describe en la primera página. Si la varilla regresa a su sitio, el moisés está listo para usar. Si la varilla no regresa a su sitio, **NO USE** el moisés.

Por favor llámenos al teléfono 1-877-416-0165.